

---

## Caution

---



Do not exceed the operating input power, voltage, and current level and signal type appropriate for the instrument being used, refer to your instrument's Function Reference.



Electrostatic discharge(ESD) can damage the highly sensitive microcircuits in your instrument. ESD damage is most likely to occur as the test fixtures are being connected or disconnected. Protect them from ESD damage by wearing a grounding strap that provides a high resistance path to ground. Alternatively, ground yourself to discharge any static charge built-up by touching the outer shell of any grounded instrument chassis before touching the test port connectors.

---

## **Safety Summary**

---

When you notice any of the unusual conditions listed below, immediately terminate operation and disconnect the power cable.

Contact your local Agilent Technologies sales representative or authorized service company for repair of the instrument. If you continue to operate without repairing the instrument, there is a potential fire or shock hazard for the operator.

- Instrument operates abnormally.
- Instrument emits abnormal noise, smell, smoke or a spark-like light during operation.
- Instrument generates high temperature or electrical shock during operation.
- Power cable, plug, or receptacle on instrument is damaged.
- Foreign substance or liquid has fallen into the instrument.

---

## **Herstellerbescheinigung**

### GERÄUSCHEMISSION

LpA < 70 dB  
am Arbeitsplatz  
normaler Betrieb  
nach DIN 45635 T. 19

---

## **Manufacturer's Declaration**

### ACOUSTIC NOISE EMISSION

LpA < 70 dB  
operator position  
normal operation  
per ISO 7779

## **Regulatory compliance information**

This product complies with the essential requirements of the following applicable European Directives, and carries the CE marking accordingly:

The Low Voltage Directive 73/23/EEC, amended by 93/68/EEC

The EMC Directive 89/336/EEC, amended by 93/68/EEC

To obtain Declaration of Conformity, please contact your local Agilent Technologies sales office, agent or distributor.

---

---

## Safety notice supplement

---

---

- This equipment complies with EN/IEC61010-1:2001.
- This equipment is MEASUREMENT CATEGORY I (CAT I). Do not use for CAT II, III, or IV.
- Do not connect the measuring terminals to mains.
- This equipment is POLLUTION DEGREE 2, INDOOR USE product.
- This equipment is tested with stand-alone condition or with the combination with the accessories supplied by Agilent Technologies against the requirement of the standards described in the Declaration of Conformity. If it is used as a system component, compliance of related regulations and safety requirements are to be confirmed by the builder of the system.



**Agilent E5092A Configurable Multiport Test Set**

# **Installation Guide**

**First Edition**



**Agilent Part No. E5092-90000**

**September 2008**

---

## Notices

The information contained in this document is subject to change without notice.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Agilent Technologies.

Microsoft®, MS-DOS®, Windows®, Visual C++®, Visual Basic®, VBA® and Excel® are registered

UNIX is a registered trademark in U.S. and other countries, licensed exclusively through X/Open Company Limited.

Portions ©Copyright 1996, Microsoft Corporation. All rights reserved.

© Copyright 2008 Agilent Technologies

---

## Manual Printing History

The manual's printing date and part number indicate its current edition. The printing date changes when a new edition is printed (minor corrections and updates that are incorporated at reprint do not cause the date to change). The manual part number changes when extensive technical changes are incorporated.

September 2008    First Edition (part number: E5092-90000)



---

## Safety Summary

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific WARNINGS elsewhere in this manual may impair the protection provided by the equipment. Such noncompliance would also violate safety standards of design, manufacture, and intended use of the instrument. Agilent Technologies assumes no liability for the customer's failure to comply with these precautions.

---

**NOTE**

The E5092A complies with INSTALLATION CATEGORY II as well as POLLUTION DEGREE 2 in IEC61010-1. The E5092A is an INDOOR USE product.

---

**NOTE**

The LEDs in the E5092A are Class 1 in accordance with IEC60825-1, CLASS 1 LED PRODUCT

---

**NOTE**

This equipment is MEASUREMENT CATEGORY I (CAT I). Do not use for CAT II, III, or IV.

---

**NOTE**

This equipment is tested with stand-alone condition or with the combination with the accessories supplied by Agilent Technologies against the requirement of the standards described in the Declaration of Conformity. If it is used as a system component, compliance of related regulations and safety requirements are to be confirmed by the builder of the system.

- Ground the Instrument

To avoid electric shock, the instrument chassis and cabinet must be grounded with the supplied power cable's grounding prong.

- DO NOT Operate in an Explosive Atmosphere

Do not operate the instrument in the presence of inflammable gasses or fumes. Operation of any electrical instrument in such an environment clearly constitutes a safety hazard.

- Keep Away from Live Circuits

Operators must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with the power cable connected. Under certain conditions, dangerous voltage levels may remain even after the power cable has been disconnected. To avoid injuries, always disconnect the power and discharge circuits before touching them.

- DO NOT Service or Adjust the Instrument Alone

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

- DO NOT Substitute Parts or Modify the Instrument

To avoid the danger of introducing additional hazards, do not install substitute parts or perform unauthorized modifications to the instrument. Return the instrument to an Agilent Technologies Sales and Service Office for service and repair to ensure that

safety features are maintained in operational condition.

- Dangerous Procedure Warnings

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

---

**WARNING**

**Dangerous voltage levels, capable of causing death, are present in this instrument. Use extreme caution when handling, testing, and adjusting this instrument.**

---

---

## Safety Symbols

General definitions of safety symbols used on the instrument or in manuals are listed below.



Instruction Manual symbol: the product is marked with this symbol when it is necessary for the user to refer to the instrument manual.



Alternating current.



Direct current.



On (Supply).



Off (Supply).



In-position of push-button switch.



Out-position of push-button switch.



A chassis terminal; a connection to the instrument's chassis, which includes all exposed metal structure.



Stand-by.

---

**WARNING**

**This warning sign denotes a hazard. It calls attention to a procedure, practice, or condition that, if not correctly performed or adhered to, could result in injury or death to personnel.**

---

---

**CAUTION**

This Caution sign denotes a hazard. It calls attention to a procedure, practice, or condition that, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the instrument.

---

---

**NOTE**

This Note sign denotes important information. It calls attention to a procedure, practice, or condition that is essential for the user to understand.

---

---

## **Certification**

Agilent Technologies certifies that this product met its published specifications at the time of shipment from the factory. Agilent Technologies further certifies that its calibration measurements are traceable to the United States National Institute of Standards and Technology, to the extent allowed by the Institution's calibration facility or by the calibration facilities of other International Standards Organization members.

---

## **Exclusive Remedies**

The remedies provided herein are Buyer's sole and exclusive remedies. Agilent Technologies shall not be liable for any direct, indirect, special, incidental, or consequential damages, whether based on contract, tort, or any other legal theory.

---

## **Assistance**

Product maintenance agreements and other customer assistance agreements are available for Agilent Technologies products.

For any assistance, contact your nearest Agilent Technologies Sales and Service Office. Addresses are provided at the back of this manual.

---

## Typeface Conventions

### **Sample (bold)**

Boldface type is used when a term is defined or emphasized.

### *Sample (Italic)*

Italic type is used for emphasis and for titles of manuals and other publications.

### **Sample** menu/button/box/tab

Indicates a menu/button/box/tab on the screen labeled “Sample” which can be selected/executed by clicking. “menu”, “button”, “box”, or “tab” may be omitted.

### Sample key

Indicates a hardkey (key on the front panel or external keyboard) labeled “Sample.” “key” may be omitted.

### **[Sample]**

Indicates the hardkey whose key label is “Sample”.

### **[Sample] - Item**

Indicates a series of key operations in which you press the **[Sample]** key, make the item called “Item” on the displayed menu blink by using the [↓] or in other ways, and then press the **[Enter]** key.

<b>1. Introduction</b>	
Manuals for E5092A . . . . .	4
Contents of This Manual . . . . .	5
<b>2. Installation</b>	
Incoming inspection . . . . .	8
Requirements for installation environment . . . . .	10
Operating environment . . . . .	10
Heat dissipation clearance . . . . .	11
Antistatic measures . . . . .	12
Providing space to disconnect the plug of the power cable . . . . .	12
Mounting front handles/flanges for rackmount . . . . .	13
Mounting handle kit (Option 1CN) . . . . .	14
Mounting rackmount kit (Option 1CM) . . . . .	15
Mounting rackmount/handle kit (Option 1CP) . . . . .	15
Power supply and fuse . . . . .	16
Checking the supply of power . . . . .	16
Setting up fuse . . . . .	16
Checking and connecting power cable . . . . .	17
Starting up E5092A . . . . .	18
Turning ON/OFF the power . . . . .	18
Cutting supply of power . . . . .	18
<b>3. Supplementary Information</b>	
Product Overview . . . . .	20
Specifications and Supplemental Information . . . . .	21
<b>4. Information on Maintenance</b>	
Cleaning this Instrument . . . . .	24
Maintenance of Test Ports . . . . .	24
Cleaning a Display Other than Test Ports . . . . .	24
Cautions Applicable to Requesting Repair, Replacement, Regular Calibration, etc. . . . .	25
Devices to be Sent Back for Repair or Regular Calibration . . . . .	25
Recommended Calibration Period . . . . .	25
<b>A. Manual Changes</b>	
Manual Changes . . . . .	28



---

# 1 Introduction

This chapter introduces the documentation for Agilent E5092A and the overview of this manual to use this manual efficiently.

## Manuals for E5092A

Agilent provides the following three manuals for E5092A.

❑ Installation Guide

The installation guide (this manual) provides start up setup information when you use the E5092A for the first time and maintenance information.

❑ User Guide

The user guide (*Online Help*) provides information about connecting the E5071C ENA Series Network Analyzer and the E5092A configurable multiport test set, setting, measurement operation and controlling the configurable multiport test set. For more information, refer to [E5071C ENA Network Analyzer Online Help](#).

❑ Service Guide

The service manual provides information about the parts, troubleshooting, performance test, adjustment and service menu.



---

## Contents of This Manual

The following shows the contents of this manual.

❑ Chapter 1, “Introduction”

This chapter introduces the documentation for Agilent E5092A and the overview of this manual to use this manual efficiently.

❑ Chapter 2, “Installation”

This chapter describes the setup of E5092A.

❑ Chapter 3, “Supplementary Information”

This chapter describes information related to E5092A.

❑ Chapter 4, “Information on Maintenance”

This chapter explains the measures you should take to maintain the Agilent E5092A.

❑ Appendix A, “Manual Changes,”

This appendix contains the information required to adapt this manual to versions or configurations of the E5092A manufactured earlier than the current printing date of this manual.

Introduction  
**Contents of This Manual**

---

## **2** **Installation**

This chapter describes the setup of E5092A.

## Incoming inspection

When you receive the product, follow the below steps to perform the incoming inspection.

---

### WARNING

**When unpacking the configurable multiport test set, if the external face of the device (such as, the cover, front/rear panel, power switch, and port connectors) appear to be damaged during transport, do not turn on the power. Otherwise, you may get an electrical shock.**

- 
- Step 1.** Check that the packing box or shock-absorbing material used to package the E5092A has not been damaged.

---

### NOTE


If the packing box or shock-absorbing material has been damaged, leave the packing box or shock-absorbing material as is until other inspections items are checked as follows.

- Step 2.** Check the packaged items supplied with the configurable multiport test set for any damage or defects..
- Step 3.** By referring to the box contents list that is separately appended, check that all packaged items supplied with the configurable multiport test set have been provided as per the specified options.
- Step 4.** After checking, if one of the following applies, contact your nearest Agilent Technologies sales and service office.
1. If the packing box or shock-absorbing material is damaged or the shock-absorbing material has traces where extreme force has been applied.
  2. A packaged item supplied with the configurable multiport test set has mechanical damage or defects.
  3. A packaged item supplied with the configurable multiport test set is missing.
  4. A fault has been detected in the subsequent operation check of the configurable multiport test set.

If an abnormality is detected in step 1, contact the company that transported the configurable multiport test set as well as your nearest Agilent Technologies sales and service office. For inspection by the transport company, save the packing box, shock-absorbing material, and packaged items as you received them.

Figure 2-1


Front Panel

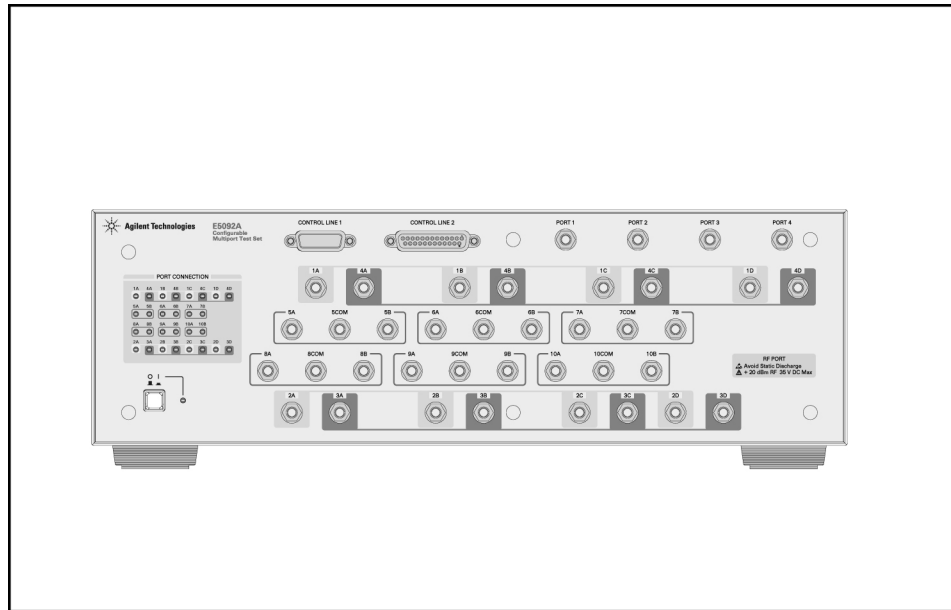

e5092cue8006

Figure 2-2

Rear Panel

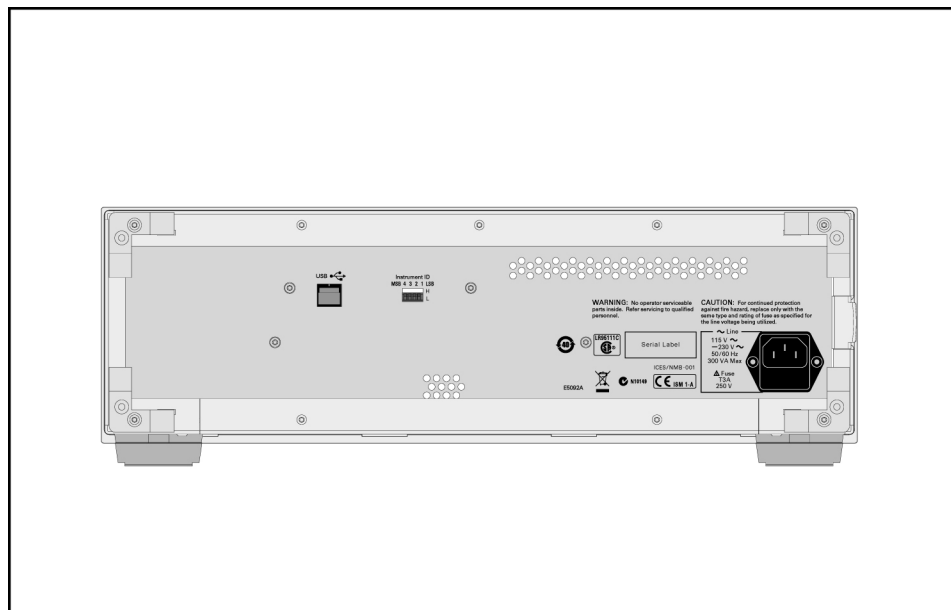

e5092cue8007

---

## Requirements for installation environment

Install the E5092A under an environment that satisfies the following conditions.

### Operating environment

Use the E5092A under the following environment.

**Table 2-1**

Temperature	5 °C to 40 °C
Temperature range during calibration	23 °C ± 5 °C (90 minutes after the instrument has turned ON)
Humidity	20-80% at wet bulb temperature < +29 °C (no condensation)
Altitude	0 m to 2,000 m (0 feet to 6,561 feet)
Vibration	0.21 G max, 5 Hz to 500 Hz

---

### CAUTION

The above operating environment does not mean the conditions under which all the specifications and measurement accuracy of the E5092A are satisfied but those under which the E5092A operates normally.

---

**Heat dissipation clearance**


To satisfy the safety, specifications, and measurement accuracy of the product, you need to keep the temperature around the product within a specific range by providing proper heat dissipation clearance around the product or by air-cooling the inside of the rack forcefully when you mount the product in the rack. For information on ambient temperature to satisfy the specifications and measurement accuracy of the product, refer to the “Specifications” Chapter in *E5071C ENA Network Analyzers Online Help*.

When the temperature around the product is kept within the temperature range in the operating environmental specifications (see “Operating environment” on page 10), the product complies with the safety standards. Furthermore, when the product is installed providing the following heat dissipation clearance under the above temperature environment, the product complies with the safety standards.

**Table 2-2**

	Condition
Rear	≥ 180 mm
Sides	≥ 0 mm (each for right and left)

**Figure 2-3** Providing heat dissipation clearance

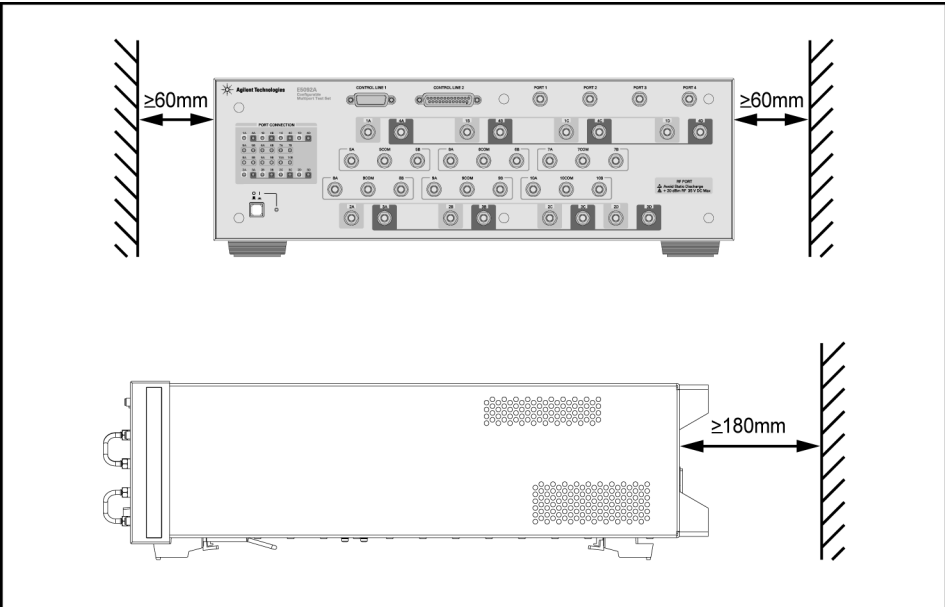


e5092aue050

### Antistatic measures

To protect electronic components from static damage, take antistatic measures as shown in Figure 2-4.

Figure 2-4

#### Example of antistatic measures

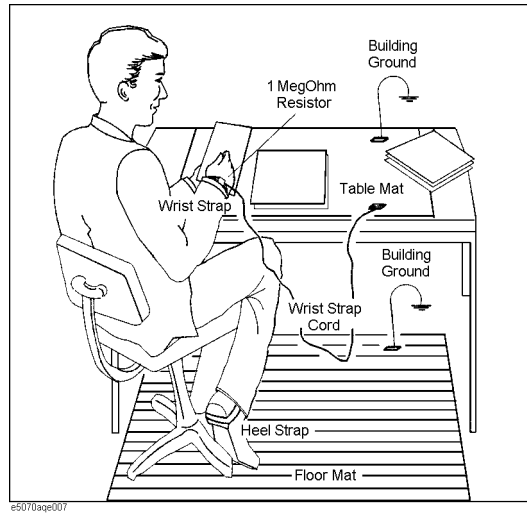

### Providing space to disconnect the plug of the power cable

As described in “Cutting supply of power” on page 18, the disconnecting device (the device to cut the supply of power) of the E5092A is the plug of the power cable. When installing the E5092A, provide sufficient clearance not to hinder the operation of disconnecting the plug of the power cable (on the power outlet side or the E5092A side) in an emergency to cut the supply of power.



## Mounting front handles/flanges for rackmount

You can use the E5092A on a workbench or mounted in a rack. This section describes how to mount the front handles used to move/transport it (Option 1CN) and how to mount it into a rack as part of a measurement system (Option 1CM: without handles/Option 1CP: with handles).


**Table 2-3 Handle/rack options for the E5092A**

Option	Name	Agilent part number
1CM	Rackmount kit	5063-9214
1CN	Handle kit	5063-9227
1CP	Rackmount/handle kit	5063-9221

**Table 2-4 Contents of each option kit**

Option	Contents	Quantity
1CN	Front handle	2
	Screw	4
	Trim strip	2
1CM	Flange for rackmount (side plate for securing)	2
	Screw	4
1CP	Flange for rackmount (side plate for securing)	2
	Front handle	2
	Screw	4

Figure 2-5 Mounting the handle/rackmount kit

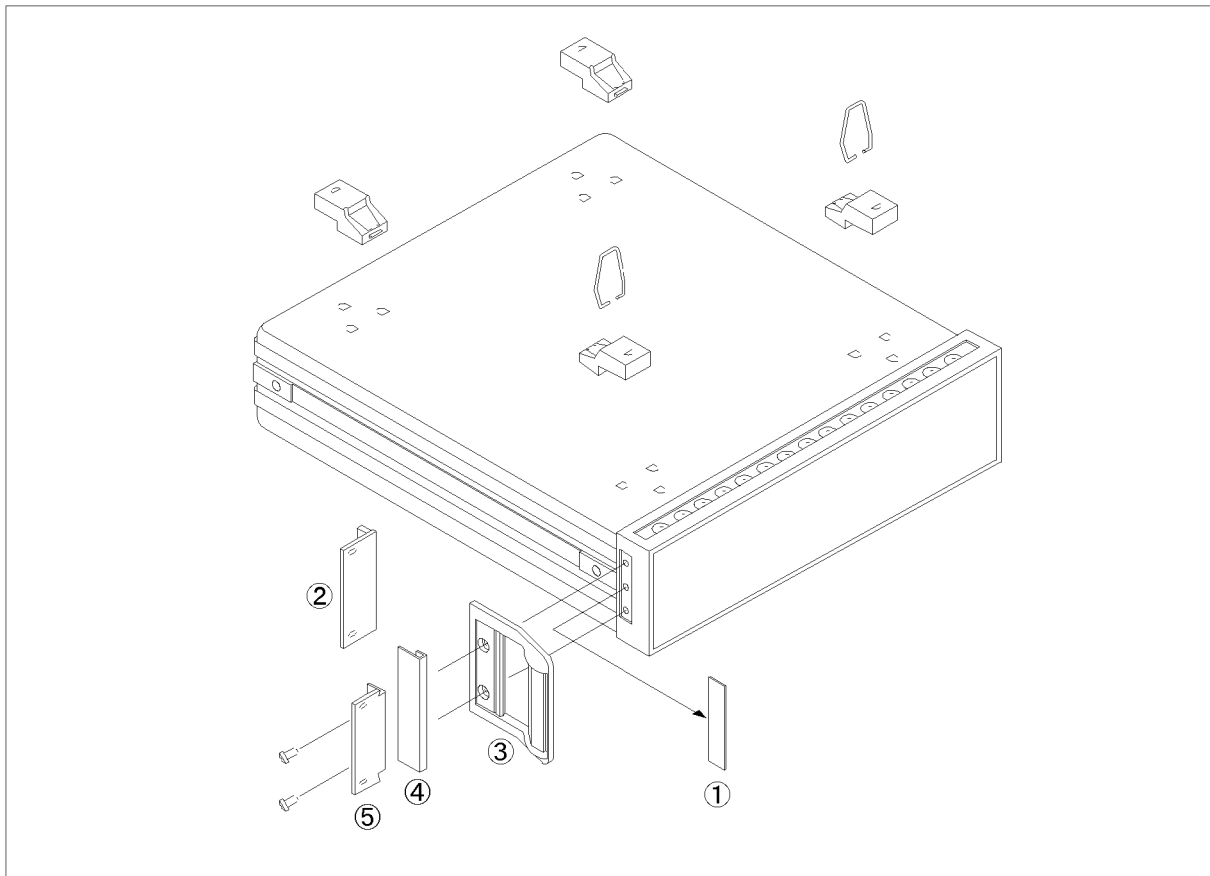

e5091auj007

### Mounting handle kit (Option 1CN)

The handle kit is a kit that contains a pair of front handles used to move/transport the E5092A. Follow these steps to mount it, referring to the Figure 2-5.

- Step 1.** Remove the trim strips (1) stuck to both the sides of the front panel (stuck to the frame).
- Step 2.** Mount the front handles (3) to both the sides of the front panel of the E5092A with the attached screws.
- Step 3.** Attach the trim strips for the handle (4) so that they cover the screws securing the front handles.

---

#### WARNING

If a front handle you mounted is damaged, replace it with new one immediately. If you use a damaged front handle to move/transport the instrument, the handle may break, which may injure the operator or break the instrument.

---

### Mounting rackmount kit (Option 1CM)

The rackmount kit is a kit that contains 2 flanges (side plates for securing) to mount the E5092A into the standard rack (width: 482.6 mm) of the EIA standard. Follow these steps to mount it, referring to the Figure 2-5.

- Step 1.** Remove the trim strips (1) stuck to both the sides of the front panel (stuck to the frame).
- Step 2.** Mount the flanges for rackmount (2) to both the sides of the front panel of the E5092A with the attached screws.
- Step 3.** Remove the four legs on the bottom of the E5092A (pull up the part with the **(TAB** indication and slide it to the arrow direction).
- Step 4.** Mount the E5092A into the rack.

### Mounting rackmount/handle kit (Option 1CP)

The rackmount/handle kit is a kit that contains both the flanges for rackmount and the front handles for the E5092A. Follow these steps to mount it, referring to the Figure 2-5.

- Step 1.** Remove the trim strips (1) stuck to both the sides of the front panel (stuck to the frame).
- Step 2.** Mount the front handles (3) and the flanges for rackmount (5) to both the sides of the front panel of the E5092A with the attached screws.
- Step 3.** Remove the 4 legs on the bottom of the E5092A (pull up the part with the **(TAB** indication and slide it to the arrow direction).
- Step 4.** Mount the E5092A into the rack.

## Power supply and fuse

Before turn ON the E5092A, check the following.

### Checking the supply of power

Check that the power supplied to the E5092A satisfies the following conditions.

Table 2-5

	Condition
Voltage	90 to 132 Vac or 198 to 264 Vac *1
Frequency	47 to 63 Hz
Power consumption	Max. 150 VA

\*1. The E5092A automatically switches between them depending on the voltage.

### Setting up fuse


Use the fuse that meets the following specifications.

**UL/CSA type, Slo-Blo, 5×20 mm miniature fuse, 3A 250V (Agilent part number: 2110-1017)**

Spare fuses are available from Agilent Technologies sales office. To check or replace the fuse, disconnect the power cable and pull out the fuse holder.

Figure 2-6

### Fuse holder and power cable inlet

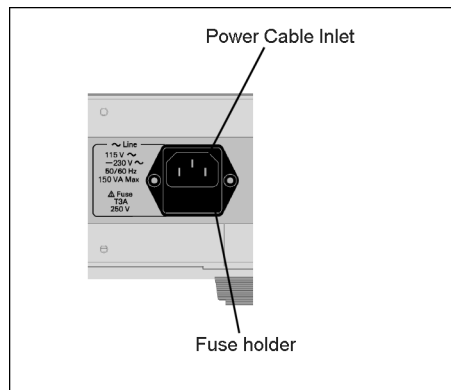

e5091aue016

## Checking and connecting power cable

The power cable that comes with the E5092A has 3-wire structure and one of them is the grounding wire. This power cable grounds the E5092A through an outlet, protecting the operator from shock hazards.

**Step 1.** Check that the power cable you use for damage.

---

**WARNING** Never use a power cable that may be damaged. You may get an electrical shock.

**Step 2.** Connect the attached power cable between the power cable receptacle on the rear panel of the E5092A and a 3-pole outlet whose grounding terminal is grounded securely.

---

**WARNING** Securely ground the E5092A with the attached 3-wire power cable with the grounding wire.




Power cord list, 16000-99101 shows the power cable options.


## Starting up E5092A

This section describes how to turn ON/OFF the E5092A and how to cut the supply of power in an emergency.

### Turning ON/OFF the power



#### Turning ON power

**Step 1.** Check that the line switch in the lower left part of the front panel is pulled up (  ). If it is pushed in (  ) which means the power is OFF, push the standby switch to pull it up (  ).

**Step 2.** Push the line switch to push it in (  ).

#### Turning OFF power

To turn OFF the E5092A, do the following.

- Push the line switch in the lower left part of the front panel so that the switch pushed in (  ) is pulled up (  ).

---

#### NOTE

To turn OFF the E5092A in normal times, press the line switch. **In normal times, never disconnect the power cable to cut the supply of power to the power cable receptacle on the rear panel.**

---

### Cutting supply of power

For the E5092A, the disconnecting device (the device to cut the supply of power) is the plug of the power cable (on the power outlet side or the E5092A side). If you need to cut the supply of power to avoid danger of electric shocks, disconnect the plug of the power cable (on the power outlet side or the E5092A side).

---

#### NOTE

Follow the description in “Providing space to disconnect the plug of the power cable” on page 12 so that you can perform this operation reliably.

To turn OFF the power in normal times, be sure to follow the procedure in “Turning OFF power”.

---

---

## **3** **Supplementary Information**

This chapter describes information related to E5092A.

## **Product Overview**

For more information on the overview and setting of E5092A Configurable multiport test set, refer to "Controlling the Multiport Test Set" in *E5071C ENA Network Analyzer Online Help*.



---

## **Specifications and Supplemental Information**

For more information on Specifications and Supplemental of E5092A Configurable multiport test set, refer to [E5071C Data Sheet](#) in *E5071C ENA Network Analyzer Online Help*.



---

## **4 Information on Maintenance**

This chapter explains the measures you should take to maintain the Agilent E5092A.

## **Cleaning this Instrument**

This section describes how to clean the instrument.

---

### **WARNING**

**To protect yourself from electrical shock, be sure to unplug the power cable from the outlet before cleaning the instrument.**

**Never clean the internal components of the instrument.**

---

### **Maintenance of Test Ports**

Test ports on the front panel of the E5092A are fitted with 3.5mm SMA type connectors (f). Stains or other damage to these connectors would significantly affect the accuracy in measurements in the RF range. Always pay attention to the following precautions.

- Always keep the connectors free from stains and dust.
- Do not touch the contact surface on the connectors.
- Do not plug damaged or scratched connectors into the test ports.
- Use compressed air for cleaning connectors. Do not use abrasives under any circumstance.

### **Cleaning a Display Other than Test Ports**

To remove stains on parts other than test ports of the instrument, wipe them gently with a soft cloth that is dry or wetted with a small amount of water and wrung tightly.

## **Cautions Applicable to Requesting Repair, Replacement, Regular Calibration, etc.**

### **Devices to be Sent Back for Repair or Regular Calibration**

If it is necessary to send the unit to the Service Center of Agilent Technologies for repair or regular calibration, please follow the instructions below.

#### **Equipment to be Sent**

When requesting repair or regular calibration of the unit by our Service Center, send only the E5092A main unit without any installed option you may have ordered. Unless specifically instructed, it is not necessary to send accessories and calibration kits.

#### **Packing**

Use the original package and shock absorbers, or equivalent antistatic packing materials, when sending the unit.

#### **Shipping Address**

For the location of the nearest Agilent Technologies Service Center, contact the Customer Contact listed at the end of this brochure.

### **Recommended Calibration Period**

The recommended calibration period for this instrument is one year. The user is recommended to request the Company's Service Center to perform regular calibration every year.

Information on Maintenance

**Cautions Applicable to Requesting Repair, Replacement, Regular Calibration, etc.**

---

## **A** **Manual Changes**

This appendix contains the information required to adapt this manual to versions or configurations of the E5092A manufactured earlier than the current printing date of this manual.

---

## Manual Changes

To adapt this manual to your E5092A, refer to Table A-1.

**Table A-1** Manual Changes by Serial Number

Serial Prefix or Number	Make Manual Changes

Agilent Technologies uses a two-part, ten-character serial number that is stamped on the serial number plate (Figure A-1). The first five characters are the serial prefix and the last five digits are the suffix.

**Figure A-1** Example of Serial Number Plate



e5091auj3004



---

**A**

assistance, 5

**C**

certification, 5

Cleaning, 24

Connectors

    Maintenance, 24

**E**

exclusive remedies, 5

**F**

flange for rackmount  
    mounting, 13

front handle

    mounting, 14

**H**

handle kit

    mounting, 15

history,

    manual printing, 2

**I**

ID

    setting, 20

inspection

    incoming inspection, 8

Interconnection Ports

    Maintenance, 24

**M**

manual

    contents, 4, 5

manual changes, 27

manual printing history, 2

**O**

operating environment, 10

**P**

power supply

    checking cable, 17

    checking the supply, 16

    connecting cable, 17

    cutting power, 18

    turning on/off, 18

**Q**

Quick Start Guide

    contents, 4, 5

**R**

rackmount kit

    mounting, 15

rackmount/handle kit

    mounting, 15

**S**

safety

    symbols, 4

safety summary, 3

serial number plate, 28

Setting the Instrument, 21

space to disconnect the plug, 12

starting up E5091A, 18

**T**

Test Ports

    Maintenance, 24

typeface conventions, 6

# REGIONAL SALES AND SUPPORT OFFICES

*For more information about Agilent Technologies test and measurement products, applications, services, and for a current sales office listing, visit our web site: <http://www.agilent.com/find/tmdir>. You can also contact one of the following centers and ask for a test and measurement sales representative. 21/01/2004*

## **United States:**

Test and Measurement Call Center  
(tel) 1 800 452-4844  
(fax) 1 888 900-8921

## **Australia/New Zealand:**

(tel) (61 3) 9210-5555 (Australia)  
(fax) (61 3) 9210-5899  
(tel) (64 4) 939-0636 (New Zealand)  
(fax) (64 4) 972-5364

## **Canada:**

Test and Measurement Call Center  
(tel) 1 877 894-4414  
(fax) 1 888 900-8921

## **Asia Pacific:**

(tel) (65) 6375-8100  
(fax) (65) 6836-0252  
Email: [tm\\_asia@agilent.com](mailto:tm_asia@agilent.com)

## **China:**

(tel) 800 810-0189  
(fax) 800 820-2816

## **Europe:**

(tel) (31 20) 547-2323  
(fax) (31 20) 547-2390

## **Japan:**

Call Center  
(tel) 0120 421-345  
(tel) (81) 426 56-7832  
(fax) (81) 426 56-7840

## **Korea:**

(tel) (82 2) 2004-5004  
(fax) (82 2) 2004-5115

## **Latin America:**

(tel) (305) 269-7500  
(fax) (305) 269-7599

## **Taiwan:**

(tel) 0800 047 866  
(fax) 0800 286 331